

### **MODELING LAMP CONTROL (ATLAS 600, ATLAS 600 TTL)**

Double-click the <CH/OK> Button to power ON/OFF the modeling lamp.

### **PAGE MODE INTERFACE**

Static Page Mode interface option stops the groups from moving around on the transmitters LCD screen.

To engage the Page Mode interface hold the Channel button for 5 seconds, or until the groups show again on the LCD screen (after the custom functions disappear).

A flashing Group letter now indicates the current Group selected.

- Single press the Group button – To scroll down groups
- Double press the Group button – To scroll up groups.
- Turn the Dial – To adjust the Group setting.
- Press the Channel button – To lock in the setting (will also lock in automatically after 2 seconds)

### **CUSTOM FUNCTIONS**

1. Press the <CH/OK> Button for 2 seconds or longer until <Fn> is displayed.
2. Select the custom function No.
  - Turn the Select Dial to choose the Custom Function No.
3. Change the Setting.
  - Press the <GR> Button until the custom function No. blinks.
  - Turn the Select Dial to set the desired number. Pressing <GR> button will confirm the settings.
  - Press <MODE> button to exit the C.Fn settings.

## NAVIGATOR X S CUSTOM FUNCTIONS

Custom Functions No.	Functions	Setting Signs	Settings and Description
C.Fn-00	Synchronization delay setting	0	No delay
		0-100	Master flash synchronization delay N*100 us (synchronization delay icon is displayed.)
C.Fn-01	Single contact mode	--	OFF
		on	ON(The single contact mode set icon is displayed.) It is advisable to set the transmitter to single contact mode when using it to trigger the flash by PC cord or through camera' s single contact.
C.Fn-02	Zoom setting	AU	Changing with camera's zoom value, Flash's auto ZOOM functions should be turned on.
		20,24,28,35,50,70,80,105,135,200	Zoom(20/24/28/35/50/70/80/105/135/200mm)
C.Fn-03	PC sync socket as an input/output	In	PC sync socket connects with camera as an input
		ou	PC sync socket connects with flash as an output
C.Fn-04	Multi Flash ON/OFF	--	Multi Flash OFF
		on	Multi Flash ON
C.Fn-05	Minimum power output value in M/Multi mode	1/128	1/128
		1/256	1/256
C.Fn-06	Displayed groups	03	3 groups are displayed
		05	5 groups are displayed
C.Fn-07	Beeper ON/OFF	--	Turn off the beeper on the receive end
		on	Turn on the beeper on the receive end

## NAVIGATOR X C CUSTOM FUNCTIONS

Custom Functions No.	Functions	Setting Signs	Settings and Description
C.Fn-00	Synchronization delay setting	0	No delay
		0-100	Master flash synchronization delay N*100 us (synchronization delay icon is displayed.)
C.Fn-01	Single contact mode	--	OFF
		on	ON(The single contact mode set icon is displayed.) It is advisable to set the transmitter to single contact mode when using it to trigger the flash by PC cord or through camera' s single contact.
C.Fn-02	Zoom setting	AU	Changing with camera's zoom value, Flash's auto ZOOM functions should be turned on.
		20,24,28,35,50,70,80,105,135,200	Zoom(20/24/28/35/50/70/80/105/135/200mm)
C.Fn-03	PC sync socket as an input/output	In	PC sync socket connects with camera as an input
		ou	PC sync socket connects with flash as an output
C.Fn-04	Second curtain sync	--	Second curtain sync of
		on	Second curtain sync on
C.Fn-05	Minimum power output value in M/Multi mode	1/128	1/128
		1/256	1/256
C.Fn-06	Displayed groups	03	3 groups are displayed
		05	5 groups are displayed
C.Fn-08	Beeper ON/OFF	--	Turn off the beeper on the receive end
		on	Turn on the beeper on the receive end
C.Fn-09	Mandatory send the setting value ON/OFF	--	After the setting value were changed, it will send the setting value.
		on	It will send the setting value mandatory before the trigger flash, although the setting value have no change.

## NAVIGATOR X N CUSTOM FUNCTIONS

Custom Functions No.	Functions	Setting Signs	Settings and Description
C.Fn-00	Synchronization delay setting	0	No delay
		0-100	Master flash synchronization delay N*100 us (synchronization delay icon is displayed.)
C.Fn-01	Single contact mode	--	OFF
		on	ON(The single contact mode set icon is displayed.) It is advisable to set the transmitter to single contact mode when using it to trigger the flash by PC cord or through camera' s single contact.
C.Fn-02	Zoom setting	AU	Changing with camera's zoom value, Flash's auto ZOOM functions should be turned on.
		20,24,28,35,50,70,80,105,135,200	Zoom(20/24/28/35/50/70/80/105/135/200mm)
C.Fn-03	PC sync socket as an input/output	In	PC sync socket connects with camera as an input
		ou	PC sync socket connects with flash as an output
C.Fn-04	Multi Flash ON/OFF	--	Multi Flash OFF
		on	Multi Flash ON
C.Fn-05	Minimum power output value in M/Multi mode	1/128	1/128
		1/256	1/256
C.Fn-06	AF assists light ON/OFF	--	OFF
		ON	ON
C.Fn-07	Displayed groups	03	3 groups are displayed
		05	5 groups are displayed
C.Fn-08	Beeper ON/OFF	--	Turn off the beeper on the receive end
		on	Turn on the beeper on the receive end
C.Fn-09	Mandatory send the setting value ON/OFF	--	After the setting value were changed, it will send the setting value.
		on	It will send the setting value mandatory before the trigger flash, although the setting value have no change.